

Use the wireless microphone

Turn the system on as shown on the first page.

Find the wireless receiver, lower left in the media cabinet. Turn it on.



Turn the input knob on the Yamaha receiver until the display shows Microphone



Locate the microphone charging station at the left of the media cabinet.

Remove the microphone. Turn the switch on its base to ON.



Speak into the microphone. Your voice should come out of the speakers around the media cabinet. Use the Comcast remote to set the volume.

See the previous pages on using the speakers on the East wall.

👉 Return the microphone to its charging stand 👉